



ChickSafe



Brinsea's ChickSafe Pulley and Door Configurations

Do you need to mount your ChickSafe at the side of your pop hole? If so, our diagrams will help you to fit pulleys into a suitable location. You can purchase additional lengths of cord from your ChickSafe supplier to allow you to site your opener further from your door. Don't attempt to fit longer cord directly – just extend the one fitted. Knots will pass reliably around ChickSafe pulleys, if required. Please note that only the ChickSafe Advance can be used inside the hen house, the Eco must be mounted outside where it can detect light levels.

